



# Disassembly and Recycling Instructions

Prompt 3880


Tools Required:

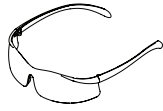


Safety Glasses

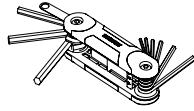

Metric Allen Wrenches



Hammer

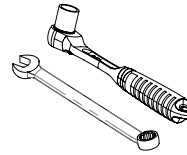

Wrenches/Ratchet

1. Remove Casters from the base. Recycle Casters
2. Face the chair down and Hammer the control while pulling on the base to separate.
3. Separate the Cylinder from the base then recycle.
4. Face the Chair down and use the allen wrench to remove and unscrew the arms. Recycle Arms
5. Use a wrench to remove the control and then recycle.
6. Recycle the Seat and Back.



**Back**

Polypropylene



**Arms**

Polypropylene



**Seat**

Polypropylene



**Control / Gas Lift**

Polypropylene, Steel



**Base**

Polypropylene



**Casters**

Polypropylene, Nylon, ABS



= Recyclable Material Content